



## Installation Instructions

*Frame Cover (Part # JB48CFT)*  
07-10 Jeep Wrangler

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
2. Remove upper existing bolts from after market front bumper (Figure 1). Save bolts for later use.
3. Position Fill Plate over cavity and line up hole on the side tabs of the Fill Plate with holes on after market bracket.
4. Align and attach Fill Plate to after market bumper with existing hardware remove in Step 2 (Figure 2).
5. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

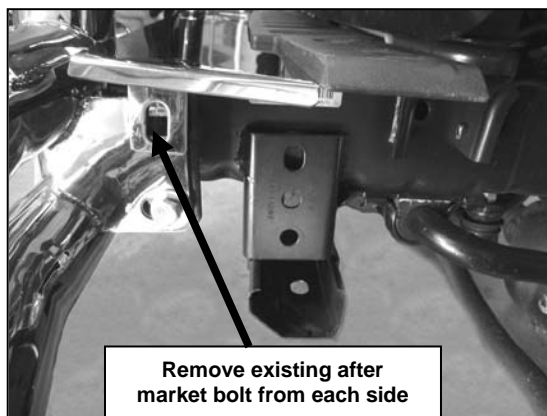


Figure 1


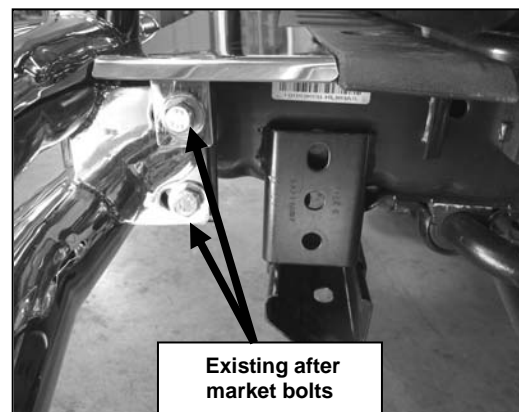


Figure 2

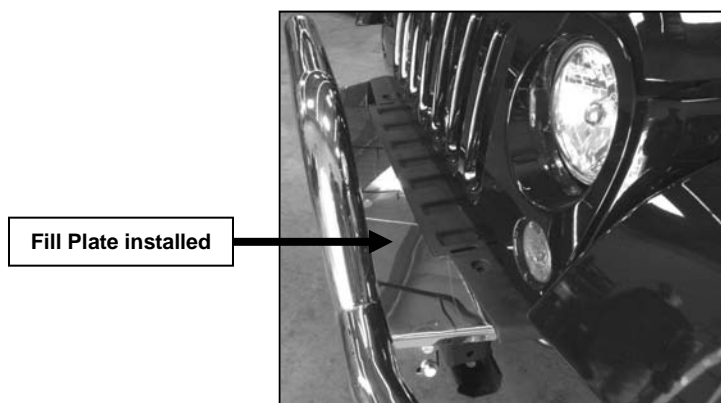

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220