



# **FITTING INSTRUCTIONS**

**TOYOTA TACOMA (USA)**

**PRODUCT NUMBER 3423020**

## **WARNING**

**FOR VEHICLES EQUIPPED WITH SRS AIRBAG**  
**WHEN INSTALLED IN ACCORDANCE WITH THESE INSTRUCTIONS, THE FRONT PROTECTION BAR DOES NOT AFFECT OPERATION OF THE SRS AIRBAG.**

### **TAKE NOTE OF THE FOLLOWING:**

- **THIS PRODUCT MUST BE INSTALLED EXACTLY AS PER THESE INSTRUCTIONS USING ONLY THE HARDWARE SUPPLIED.**
- **DO NOT USE THIS PRODUCT FOR ANY VEHICLE MAKE OR MODEL, OTHER THAN THOSE SPECIFIED BY ARB.**
- **DO NOT REMOVE LABELS FROM THIS BULL BAR.**
- **THIS PRODUCT OR ITS FIXING MUST NOT BE MODIFIED IN ANY WAY.**

**FITTING KIT NUMBER 6171370**

| USE                                  | PART No  | QTY | DESCRIPTION                  |
|--------------------------------------|----------|-----|------------------------------|
| IMPACT ABSORBERS<br>TO CHASSIS RAILS | 6151096  | 2   | BOLT M12 x 40mm              |
|                                      | 6151095  | 2   | BOLT M12 x 1.25 PITCH X 35mm |
|                                      | 4581050  | 6   | WASHER SPRING M12            |
|                                      | 4581049  | 8   | WASHER FLAT M12              |
|                                      | 6151138  | 2   | NUT ½" UNC                   |
|                                      | 6151105  | 2   | BOLT ½" x 4 ½" UNC           |
|                                      | 3751872L | 1   | IMPACT ABSORBERS             |
|                                      | 3751872R | 1   | IMPACT ABSORBERS             |
| SPLASH PAN<br>TO BULL BAR            | 6151021  | 3   | BOLT M8 x 20mm               |
|                                      | 4581044  | 3   | WASHER FLAT M8               |
|                                      | 3314401  | 1   | SPLASH PAN                   |
|                                      | 6151132  | 3   | NUT FLANGE                   |
| BULL BAR TO<br>IMPACT ABSORBERS      | 6151045  | 6   | BOLT M10 x 25mm              |
|                                      | 4581048  | 6   | WASHER SPRING M10            |
|                                      | 4581040  | 6   | WASHER FLAT M10              |
| BUFFERS TO BULL BAR                  | 6151132  | 4   | NUT FLANGE M8                |
| CONTROL BOX BRACKET                  | 6151021  | 2   | BOLT M8 x 20mm               |
|                                      | 4581044  | 2   | WASHER FLAT M8               |
|                                      | 3751564  | 1   | CONTROL BOX BRACKET          |
|                                      | 6151132  | 2   | NUT FLANGE M8                |
| NUMBER PLATE BRACKET                 | 6151017  | 4   | BOLT M6 x 16mm               |
|                                      | 6151046  | 4   | WASHER FLAT M6               |
|                                      | 6151128  | 4   | NUT FLANGE M6                |
|                                      | 3751542  | 1   | NUMBER PLATE BRACKET         |
| BUFFERS AND INDICATORS               | 3500200  | 1   | BUFFERS KIT                  |
|                                      | 3500080  | 1   | ARB INDICATORS               |
| 8-9000lb WINCH TO PAN                | 4581040  | 4   | WASHER FLAT 3/8"x 1"         |
|                                      | 180302   | 6   | CABLE TIES                   |

**THE FOLLOWING PARTS ARE ONLY FOR 2002 MODEL ONWARD**

|                   |         |   |                                 |
|-------------------|---------|---|---------------------------------|
| CHASSIS EXTENSION | 3756405 | 2 | BRACKET CHASSIS EXTENSION       |
|                   | 6151246 | 2 | BOLT M12 X 1.75 PITCH X 25MM    |
|                   | 4581049 | 2 | WASHER M12                      |
|                   | 4581050 | 2 | WASHER SPRING M12               |
|                   | 3756407 | 1 | BRACKET SUMP GUARD SUPPORT ASSY |
|                   | 5846400 | 2 | PACKER RECTANGULAR              |
|                   | 6151294 | 3 | "U" NUT M8                      |
|                   | 6151021 | 3 | BOLT M8 X 20MM                  |
|                   | 4581044 | 3 | WASHER M8                       |
|                   | 4581046 | 3 | WASHER SPRING M8                |

**TOOLS REQUIRED**


1 BASIC TOOL KIT, DRILL, ½" DRILL BIT. ¾" LONG REACH SOCKET. (IF DRIVING LIGHTS ARE TO BE FITTED)

## ASSEMBLY SEQUENCE FOR BULL BAR INSTALLATION.



1. Remove bumper bar, tie down rings, and tow hook from the vehicle.
2. Remove the crush cans from the front of the vehicle. (On 2002 models onward, the crush cans are welded to the sump guard support cross member which must be removed)
3. Fit the indicators into bar.
4. Fit number plate bracket to bull bar using 6mm hardware.
5. Fit control box bracket to bull bar using 8mm hardware.
6. Fit buffers to bull bar using M8 flange nuts supplied in buffer kit.

**NOTE: DO NOT OVER TIGHTEN.**

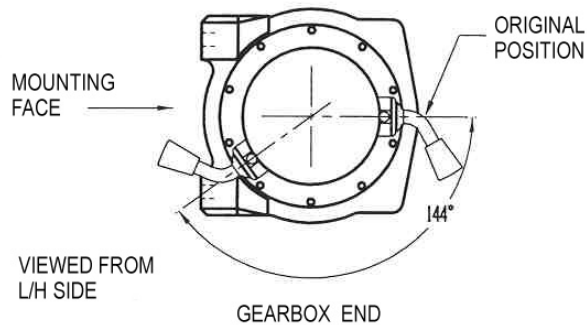

7. To place the clutch handle in the correct position, the winch gearbox must be rotated 144 degrees (4 hole spacings), in anti- clockwise direction when viewed from gearbox end. Place the winch on its end and remove all gearbox bolts. Gently raise the gearbox just enough to rotate it. When the correct position is located, refit all bolts and tighten.

**NOTE: Take care not to lift the assembly more than a couple of millimetres while rotating to correct position to avoid unmeshing the gears.**

See diagram opposite.




8. Once winch is rotated, positioned winch on bench face up.
9. Lower bull bar on top of winch and align holes with each other. Using 1 1/4" x 3/8" bolts and flat washers from bolt kit, secure the two most upper holes first and finger tighten. Remove top circlips from vertical rollers of fairlead and remove pins and rollers, this is done so there is easy access to lower bolts.

10. Place roller fairlead in bar cutout over lower holes and fasten using 1 1/2" x 3/8" bolts and 3/8" flat washers supplied in bolt kit.
11. When all is positioned, tighten all bolts firmly and replace rollers, pins and circlips back to roller fairlead.


**If fitting the XP 9.5 winch, continue to step 12, otherwise, jump to step 19.**




12. If fitting the **XP 9.5 winch**, remove the cover from the control box.

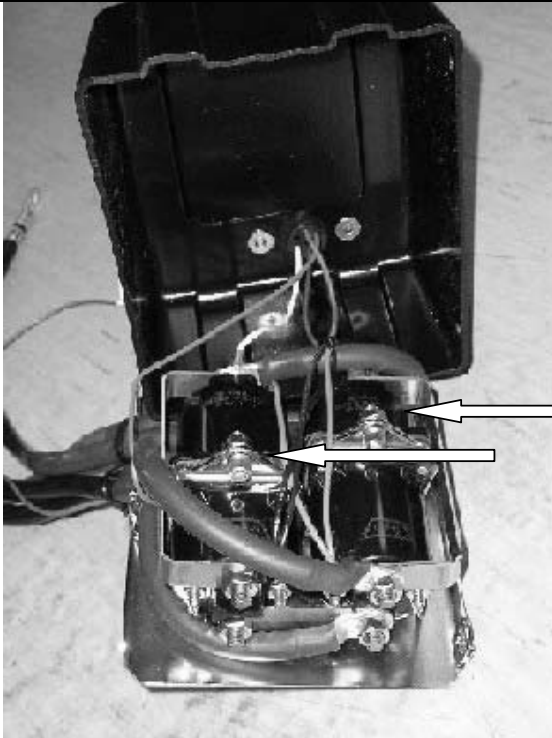

13. Remove the two cap screws, nuts and spacer washers that hold the four solenoids in place.

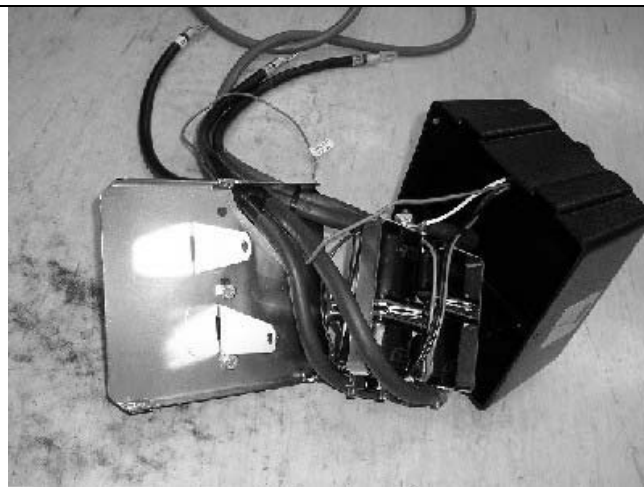


14. Remove the four solenoids from the base of the control box using the copper bus bar as an aid and hold to one side.

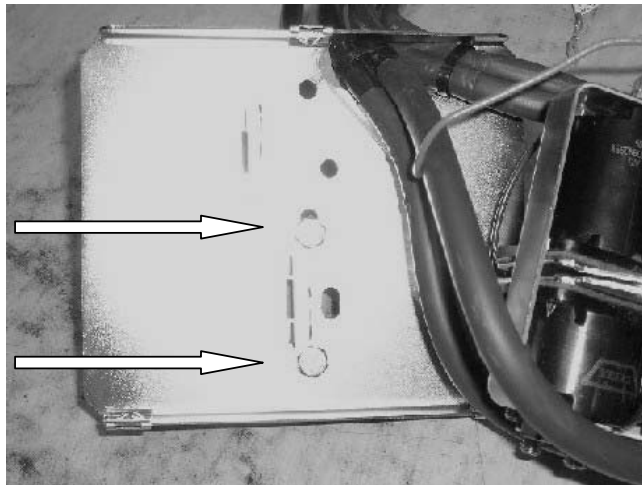


Before

15. Remove the two bolts in the base of the control box and reposition them into the more centralised holes

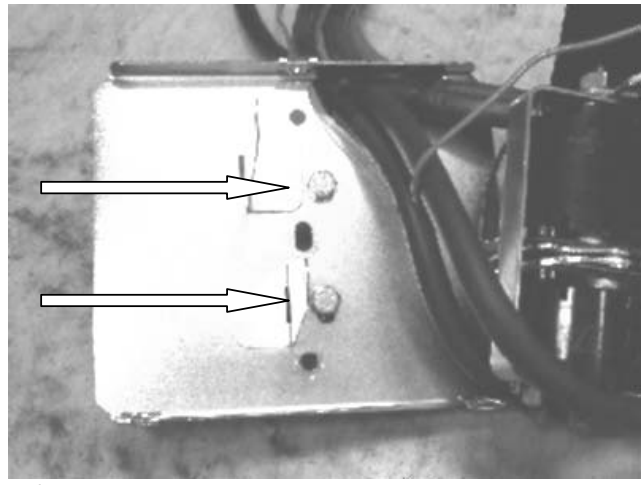


After

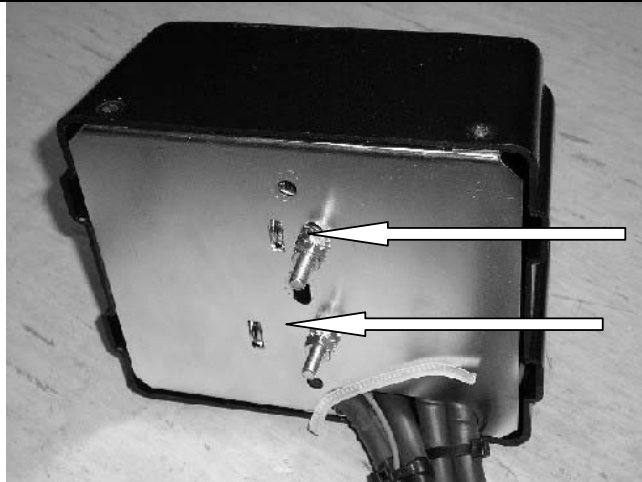

16. Place the 4 solenoids over the 2 metal stands that are facing upwards. Make sure they line up with the holes in the base.



17. Replace the 2 cap screws, washers and nuts removed in step 13 above into original holes.  
18. Replace the black cover and refit the three cover screws (DO NOT OVER TIGHTEN)

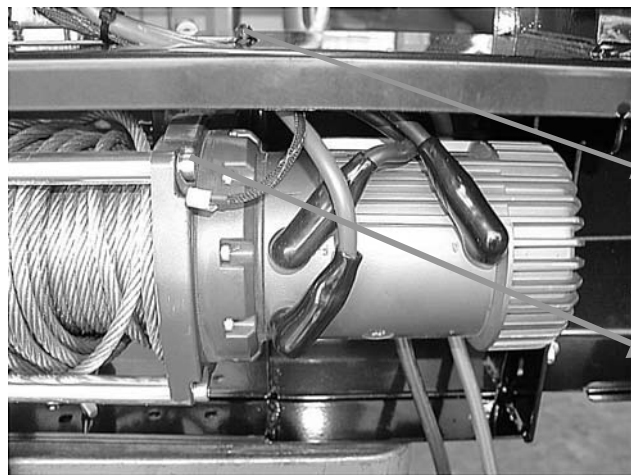

19. Fit control box to control box bracket and tighten firmly.
20. Pull wires through viewer cutout under control box and wire up as per Warn instruction manual.
21. Tie back cables clear of all moving parts with cable tie supplied.
22. Place ground earth lead under bolt of winch tension bar.

**FOR 2002 MODELS ONWARD go to step 23.**

**FOR PREVIOUS MODELS go to step 24. (The parts listed in step 23 will not be required)**



23. Push the 3 M8 "U" nuts onto the sump guard support and bolt the chassis extension and support to the front of the chassis using 2 M12 x 35mm fine pitch bolts, flat washers, spring washers and rectangular packer.



24. Fit impact absorbers to both sides of the vehicle.
25. On LH Side of vehicle, refit tow hook using original 12mm bolts.
26. **Prior 2002 models**, fit 12mm x 30mm fine pitch bolt to the front of the chassis.  
**2002 models on**, fit 12mm x 25mm course pitch bolts to the front of the chassis extension.
27. From underneath of bracket, drill right through, using ½" drill bit and fit 4 ½" bolt upward with washers and nut.
28. On RH Side of vehicle under impact absorber, relace tie downs and bolt up using 12mm x 40mm bolts etc.
29. When all bolts are fitted, finger tighten only.




30. Lift bar into position between impact absorbers and bolt up using M10 x 25mm bolts, spring and flat washers. Finger tighten only. (Bolts fit from inside of bar.)
31. At this stage, firmly tighten all impact absorber bolts.
32. Adjust bar so that there is a 20mm gap around the periphery of the vehicle and securely tighten all remaining bolts throughout.
33. Wire main power leads to battery as per Warn instructions and cable tie leads securely from all moving parts with cable ties supplied.
34. Fit number plate to bar using 6mm hardware.
35. Pull winch cable through roller fairlead, and fit tow hook.



36. Connect the indicator looms to the existing indicator loom with the Scotchloks supplied. Test to ensure the indicators function correctly.
37. **Prior 2002 models.** Once bar is correctly fitted, undo front bolts in splash pan of vehicle, slide bar plate in between and refit bolts and finger tighten. **2002 models on,** splash pan is bolted to bull bar as above and bolted to cross member installed in step 23. using 8mm hardware supplied.
38. Using 8mm hardware supplied, bolt plate to front of underside of bar. When all bolts are fitted, tighten firmly.



39. If driving lights are to be fitted, use extension bar with ratchet,  $\frac{3}{4}$ " long reach socket to tighten from cutout in centre pan.

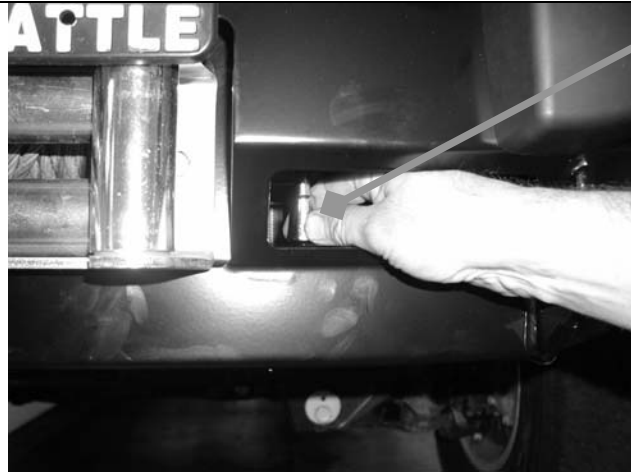

40. Winch handle is operated from this cutout.